



# ***bulcan***



# INSTALATION GUIDE



## **Compatibility**

Bulcan version 1.0 is specifically designed for all Bosch motors prior to Smart System, valid for Gen2, Gen3, Gen4.

## **Your ebike**

Given the wide variety of frames that are currently available with a Bosch motor installed, it is the customer's responsibility to have the instructions for their ebike to be able to access the connectors for installing Bulcan on the motor.

## **Installation**

To install Bulcan you must have the ebike turned off and it is recommended to remove the battery if it is removable.

# STEP 1

## Motor cover removal.



Unscrew the screws holding the engine cover, remove the motor cover.  
On some ebikes it is necessary to remove the crank.




# STEP 2

## Disconnection of the display.

Disconnect the motor display/control connector.

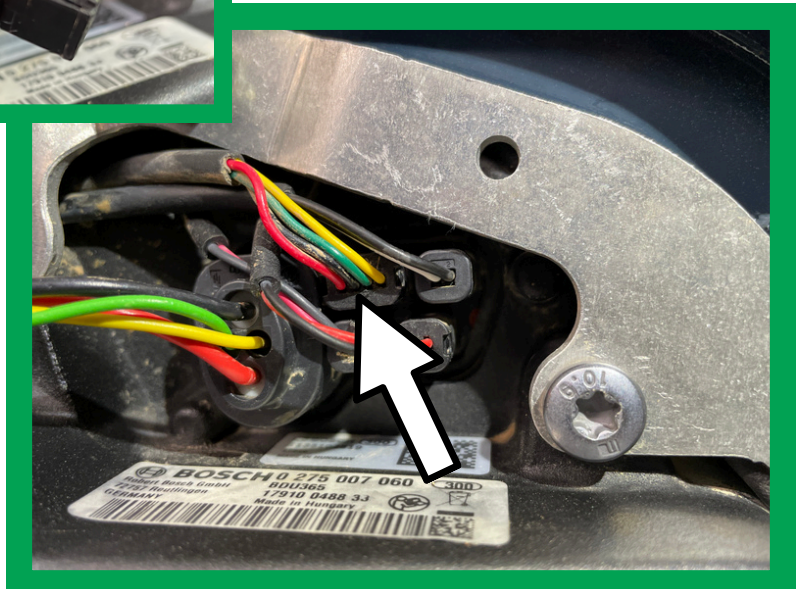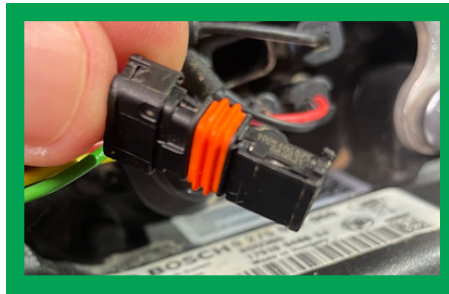


# STEP 3

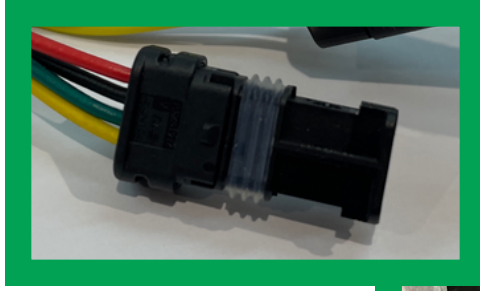

## Bulcan connection.



Replace the original connector with the bulcan connector

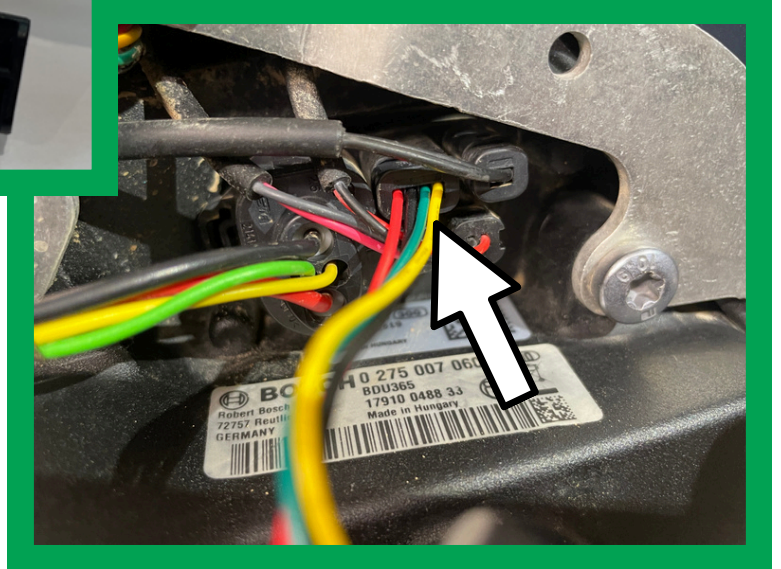

# STEP 4

## Bulcan connection 2.


Plug the ebike connector disconnected from the motor into the Bulcan connector.

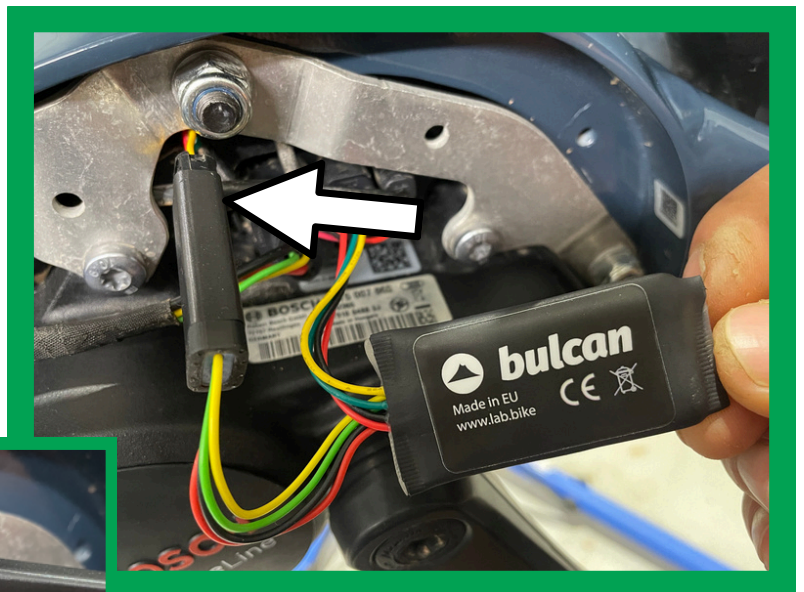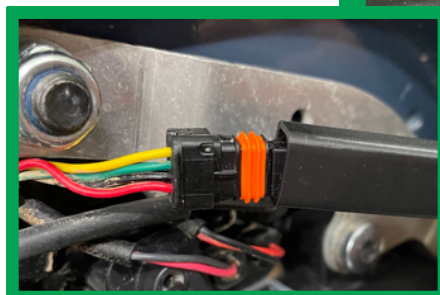

# STEP 5

## Motor cover assembly.

- 1-Fit the Bulcan and all connectors and wires into the free space in the motor.
- 2-Place the motor cover to its original position and tighten the original screws.

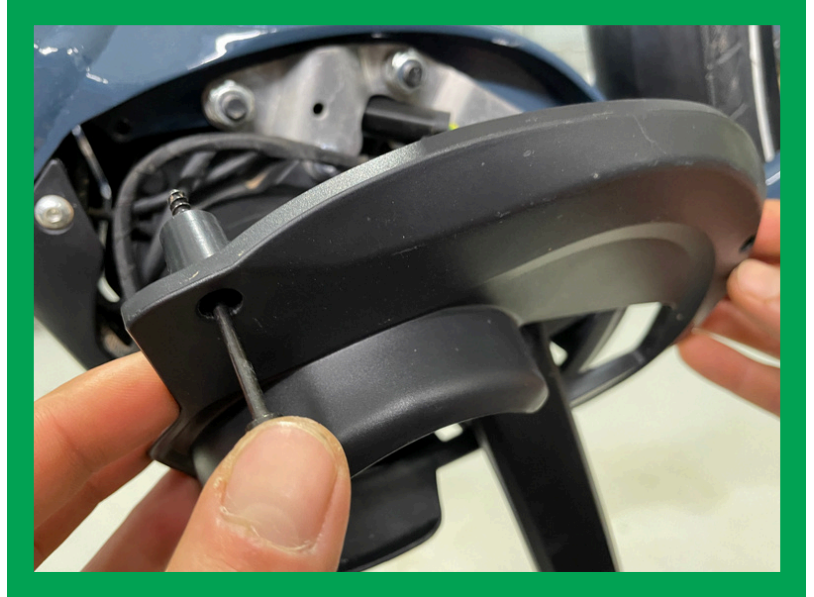

**Your Bulcan is installed, go to the users manual to pair Bulcan with your device.**